


CP110 w/display programming

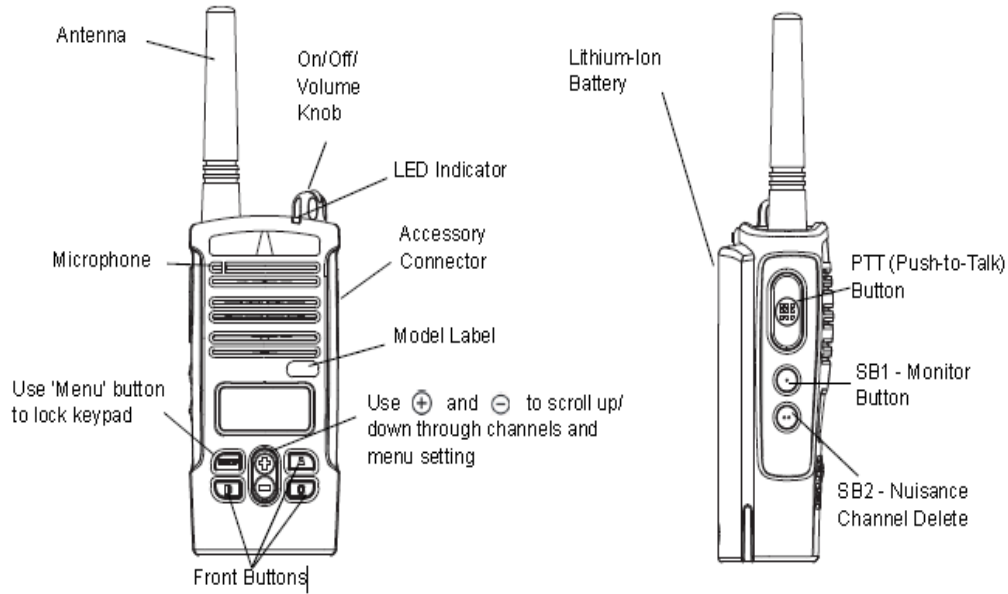

CP100 - CP110 FREQUENCY INTERCHANGE

FREQ (UHF)	CP100	CP110		FREQ (UHF)	CP100	CP110	
464.4750		1		461.1125	28	28	
464.5000	1	2		461.1375	29	29	
464.5500	2	3		461.1625	30	30	
467.7625	3	4		461.1825	31	31	
467.8125	4	5		461.2125	32	32	
467.8500	5	6		461.2375	33	33	
467.8750	6	7		461.2625	34		
467.9000	7	8		461.2875	35	34	
467.9250	8			461.3125	36	35	
462.5750	9	9		461.3375	37	36	
462.6250	10	10		461.3625	38	37	
462.6750	11	11		462.7625	39		
464.3250	12	12		462.7875	40		
464.8250	13	13		462.8125	41		
469.2625	14	14		462.7375	42		
469.5000	15	15		462.8625	43		
469.5500	16	16		462.8875	44		
462.7625	17	17		462.9125	45		
462.7875	18	18		464.4875	46		
462.8125	19	19		464.5125	47	38	
462.8375	20	20		464.5375	48	39	
462.8625	21	21		464.5625	49	40	
462.8875	22	22		466.0375	50	41	
462.9125	23	23		466.0625	51	42	
464.4875	24	24		466.0875	52		
461.0375	25	25		466.1125	53	43	
461.0625	26	26		466.1375	54	45	
461.0875	27	27		466.1625	55	44	

FREQ (VHF)	CP100	CP110 BEFORE 12/2011	CP110 AFTER 12/2011	FREQ(VHF)	CP100	CP110 BEFORE 12/2011	CP110 AFTER 12/2011
151.6800		1	1	154.5150	14	15	13
151.6250	1	2	2	154.5400	15	16	14
151.9550	2	3	3	158.4000	16	17	15
154.5700	3	4	N/A	151.7000	17	18	16
154.6000	4	5	N/A	151.7600	18	19	17
151.6550	5	6	4	151.5125	19	20	18
151.6850	6	7	5	151.8200	20	21	N/A
151.7150	7	8	6	151.8800	21	22	N/A
151.7750	8	9	7	151.9400	22	23	N/A
151.8050	9	10	8	151.5125	23	24	19
151.8350	10	11	9	151.7450	24	25	20
151.8950	11	12	10	152.8650	25	26	21
151.9250	12	13	11	152.7000	26	27	22
154.4900	13	14	12	154.5275	27	28	23

Step 1 Enter Programming Mode

[To enter 'Programming Mode', press and hold both the PTT button and the SB1 button simultaneously for three seconds, while turning ON the radio. A unique tone will sound, indicating that the radio has entered 'Programming Mode' and the radio LED will signal a green heartbeat. Once the radio enters the 'Programming Mode', which defaults to 'Idle' Programming Mode, the LED will blink a green heartbeat.]

Step 2 Program Channel

Short press PTT button.



Press + / - buttons to select channel

Step 3 Program Frequency

Find frequency the CP100 and refer to UHF/VHF Frequency chart to find corresponding frequency on the CP110.

Short press PTT button or MENU button.

Press + / - buttons to select Frequency

Step 3 Program Code

Set code on old CP100 radio(s) to 1 before progressing if current code is 0

Short press PTT button or MENU button.



Press + / - buttons to select Code to match CP100

Long Press PTT button to return to Programming Mode then Long Press PTT button to exit

Turn radio off and then back on

Radio is programmed