



# WIRING INSTRUCTIONS




## VEHICLE WIRES

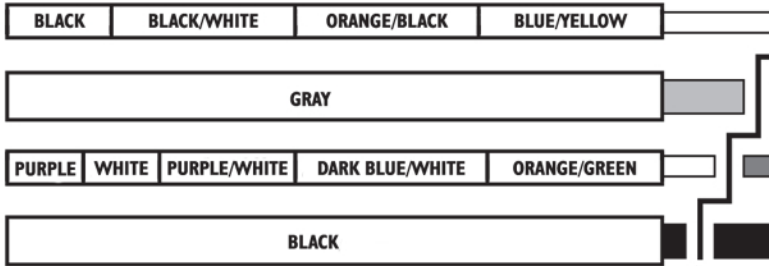

## UPGRADED HARNESS



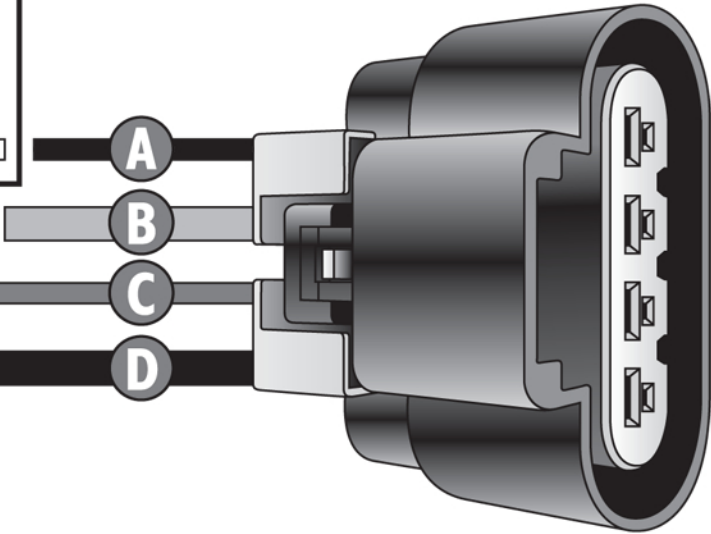


CRIMPED CONNECTORS MUST BE STAGGERED TO ENABLE THE HARNESS TO FIT INSIDE THE VEHICLE WIRING LOOM.



## WIRE HARNESS INSTALLATION

### BUTT CONNECTOR

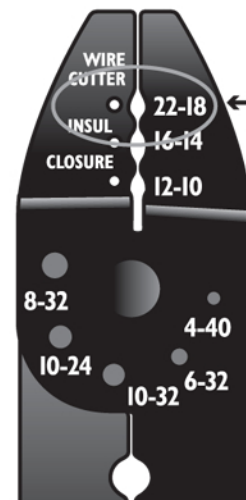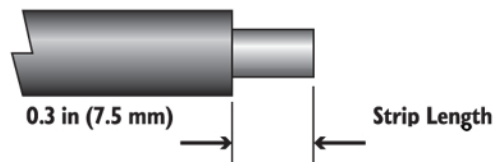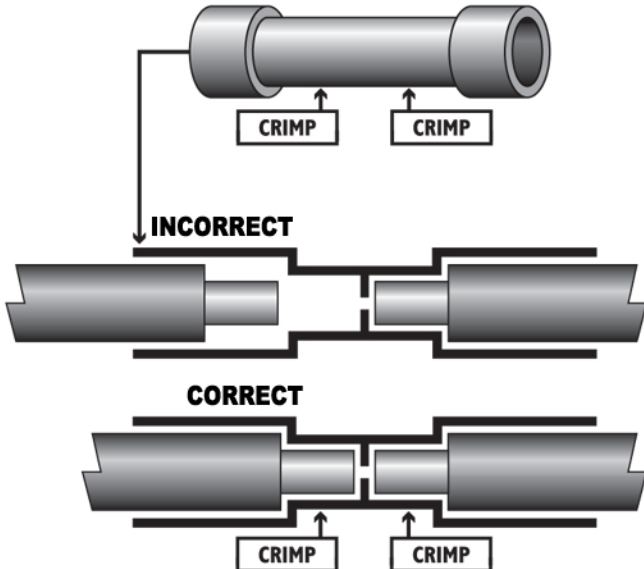

CRIMP FERRULES IN LOCATIONS SHOWN USING THIS END OF TOOL.